

## Quick Help and Tips



What should I do if I have a snowy picture (or a blue or black screen) on TV2?

Check to make sure your TV (and if connected, your VCR) is tuned to the correct channel. Unless changed, factory default for TV2 is channel 60. Refer to the "How to Watch TV on TV2" section in this guide for correct channel setup or use the RECOVER button.



Why does my TV2 display a moving DISH Network logo that says "Shared view is currently disabled"?

Your satellite receiver is in "Single Mode" and "Shared View" is disabled. To watch what TV1 is watching, simply enable the Shared View option. To watch a program on TV2 that is different than what is being viewed on TV1, press the MODE button on the front of the satellite receiver to put it in Dual Mode. See your *User's Guide* for Shared View options.



What should I do if my remote control doesn't seem to operate my satellite receiver?

- Try pressing the SAT Mode button.
- Check to make sure you are using the correct remote (TV1 or TV2) for the desired location.
- Your remote control batteries may need to be replaced (alkaline batteries are recommended).
- Check the remote address (see *User's Guide*).



Why does my receiver change channels and do things on its own?

You may have a neighbor that also has a UHF remote that is controlling your receiver. Simply change your remote control address. See your *User's Guide* for instructions.



What would affect my satellite signal?

- Look for obstructions in front of your satellite dish such as new tree or plant growth.
- If you are still experiencing signal interruptions, contact Technical Assistance. Press the SYSTEM INFO button on the front of your receiver and call the Technical Assistance phone number shown on the screen.



What would cause programs to disappear from My Recordings?

The oldest, unprotected recordings will be replaced with new recordings when there is no more room on the receiver. To avoid losing a recorded event, use the Protect option when you set up the recording or when you select it from the My Recordings screen.

POWER

MODE

POWER

**Tip:** To ensure your receiver has the latest program guide information and the latest software updates, press the POWER button on both remote controls to turn your receiver off when not in use.

**Tip:** To watch the same program on both TV1 and TV2, place your receiver in Single Mode. To watch different programs on TV1 and TV2, place your receiver in Dual Mode. Use the MODE button on the front panel of the receiver to toggle between Dual and Single mode.

**Tip:** Some receiver problems can be resolved by pressing and holding the POWER button on the front of the receiver until the front panel lights go out and come back on. After releasing the POWER button, the receiver should return to normal operation within a few minutes.

## Enhance Your TV Experience

Tune to DISH Network  
FYI Channel 101

dishnetwork.com

Press DISH button  
and select Service

See the  
User's Guide



## Using the Recover Button

Use the Recover button to get back to watching satellite programming if you accidentally change channels or inputs on your TV



1 Press and hold the RECOVER button until all mode buttons light up.



2 If you see this System Information screen, proceed to step 4. Otherwise, continue to step 3.



3 Press the RECOVER button again & wait until the mode lights stop flashing. If you see the System Information screen, go to step 4. If not, repeat this step until you do.



4 Press the SELECT button (to choose Done).

## QUICK REFERENCE GUIDE

### Two-TV DVR Satellite Receiver

Keep this guide in your TV2 viewing area

Look inside for important tips to operate your satellite receiver



## Channel Directory

Note: All programming subject to change without notice. Go to dishnetwork.com for a current directory.

A&E	118	•••	Fox Reality	190	•••	ShopNBC	228	•••
ABC Family	180	•••	Fox Soccer	149	•••	Si TV	159	•••
AMC	130	•••	Free Speech TV	9415	•••	SOAPnet	188	•••
America's Preview Channel	221	•••	Fuse	158	•••	SPEED	150	•••
Angel One	262	•••	FX	137	•••	Spike TV	168	•••
Animal Planet	184	•••	G4	191	•••	Style	115	•••
BBC America	135	•••	Galavisión	833	•••	TBN	260	•••
Beauty & Fashion Channel	225	•••	GoTV	407	•••	TBS	139	•••
BET	124	•••	Golf Channel, The	401	•••	TeleFutura (East) <sup>2</sup>	830	•••
Biography Channel, The	119	•••	Great American Country (GAC)	167	•••	TeleFutura (West) <sup>2</sup>	831	•••
Bloomberg Television	203	•••	GSN	116	•••	Tennis Channel, The	400	•••
Boomerang	175	•••	Hallmark Channel	185	•••	The Movie Channel (West)	329	•••
Bravo	129	•••	Hallmark Movie Channel	187	•••	The Movie Channel xtra (West)	330	•••
BYUTV	9403	•••	Healthy Living Channel	223	•••	TLC	183	•••
Cartoon Network	176	•••	HGTV	112	•••	TNT	138	•••
CCTV-9 <sup>1</sup>	265	•••	History Channel, The	120	•••	Toon Disney	174	•••
CCTV-E&F <sup>1</sup>	884	•••	History International	121	•••	Travel Channel	215	•••
CMT	166	•••	HTN	843	•••	Turner Classic Movies	132	•••
CNBC	208	•••	HorseRacing TV	404	•••	Turner South <sup>1</sup>	477	•••
CNBC World	207	•••	HSN	222	•••	TVG	405	•••
CNN	200	•••	iDrive TV	217	•••	TV Guide Channel	102	•••
CNN Headline News	202	•••	Independent Film Channel (IFC)	131	•••	TV Land	106	•••
CoLours TV	9407	•••	International Music Feed	157	•••	TV Outlet Mall	219	•••
Comedy Central	107	•••	iShop	229	•••	University of California TV	9412	•••
Court TV	204	•••	Jewelry Television	227	•••	University of Washington TV	9404	•••
C-SPAN	210	•••	KBS World <sup>1</sup>	704	•••	Univision (East)	827	•••
C-SPAN2	212	•••	Kid Tunes (Audio only)	976	•••	Univision (West)	828	•••
CSTV	152	•••	Lifetime	108	•••	USA Network	105	•••
Discovery Channel	182	•••	Lifetime Movie Network	109	•••	VH1	162	•••
Discovery Health	189	•••	Linkmedia	9410	•••	VH1 Classic	163	•••
Discovery Home	194	•••	Men's Channel, The	218	•••	WE: Women's Entertainment	128	•••
Discovery Kids	179	•••	Military Channel	195	•••	Weather Channel, The	214	•••
Discovery Times	192	•••	MSNBC	209	•••	WGN	239	•••
Disney Channel (East)	172	•••	MTV	160	•••			
Disney Channel (West)	173	•••	MTV2	161	•••			
DY	111	•••	mun2	838	•••			
Documentary Channel	197	•••	NASA	213	•••			
E! Entertainment Television	114	•••	National Geographic Channel	186	•••			
Encore (West)	341	•••	NFL Network	154	•••			
Encore Action	343	•••	Nickelodeon Games & Sports	177	•••			
Encore Drama	345	•••	Nickelodeon/Nick at Nite (East)	170	•••			
Encore Love	346	•••	Nickelodeon/Nick at Nite (West)	171	•••			
Encore Mystery	344	•••	Nicktoons Network	178	•••			
Encore Wam	347	•••	NOGGIN/The N	169	•••			
Encore Westerns	342	•••	Northern Arizona University	9411	•••			
ESPN	140	•••	Outdoor Channel, The	153	•••			
ESPN2	144	•••	Oxygen	127	•••			
ESPN Classic	143	•••	PAX TV	181	•••			
ESPNNEWS	142	•••	QVC	226	•••			
ESPNU	148	•••	Research TV	9400	•••			
EWTV	261	•••	Resort & Residence Channel	216	•••			
Fine Living	113	•••	RFD-TV	9409	•••			
Food Network	110	•••	SCI FI Channel	122	•••			
Fox Movie Channel	133	•••	Science Channel, The	193	•••			
FOX News Channel	205	•••	Shop at Home	224	•••			

\* FREE Spanish audio feed. Audio disponible en español.

<sup>1</sup> = Available at no cost to all DISH Network customers. CCTV channels require DISH 500, DISH 1000 or SuperDISH antenna. KBS World requires SuperDISH antenna pointed at 121° orbital location and subscription to qualifying programming. Additional fees may apply for existing DISH Network customers to upgrade their dish antenna. <sup>2</sup> TeleFutura East is available to subscribers in the Eastern and Central time zones. TeleFutura West is available to subscribers in the Mountain and Pacific time zones. <sup>3</sup> = Available in: Georgia, Mississippi, & Carolina. Tennessee and sections of N. Carolina.

America's "Everything" Pak includes America's Top 100 package plus all four premium movie packages and NBA TV (channel 602).

## Movie Packages


<b>HBO</b>	Starz (East)	350	<b>SHOWTIME UNLIMITED</b>	
HBO (East)	Starz (West)	351	FLIX	333
HBO (West)	Starz Cinema (East)	353	The Movie Channel (East)	327
HBO2 (East)	Starz Cinema (West)	354	The Movie Channel xtra (East)	328
HBO2 (West)	Starz Kids & Family	356	Showtime Too	320
HBO Comedy	Starz Edge	352	Showtime (East)	318
HBO Family			Showtime (West)	319
HBO Latino			Showtime Beyond	323
HBO Signature	<b>CINEMAX</b>		Showtime Extreme	322
HBO HD**	5StarMAX	314	Showtime Showcase	321
	ActionMAX	313	Sundance Channel	332
	Cinemax (East)	310	Showtime HD**	9460
	Cinemax (West)	311		
	MoreMAX	312		
<b>STARZ!</b>				
Starz InBlack		355		
Encore (East)		340		

\* FREE Spanish audio feed available. Audio disponible en español. \*\*Requires HD television and receiver.

## Features of Your Remote Control 2

To use the features described in this section, make sure you are in SAT mode by pressing the SAT Mode button

*Note: To control a TV, VCR, or other available component, the remote must be programmed. See the User's Guide for details.*

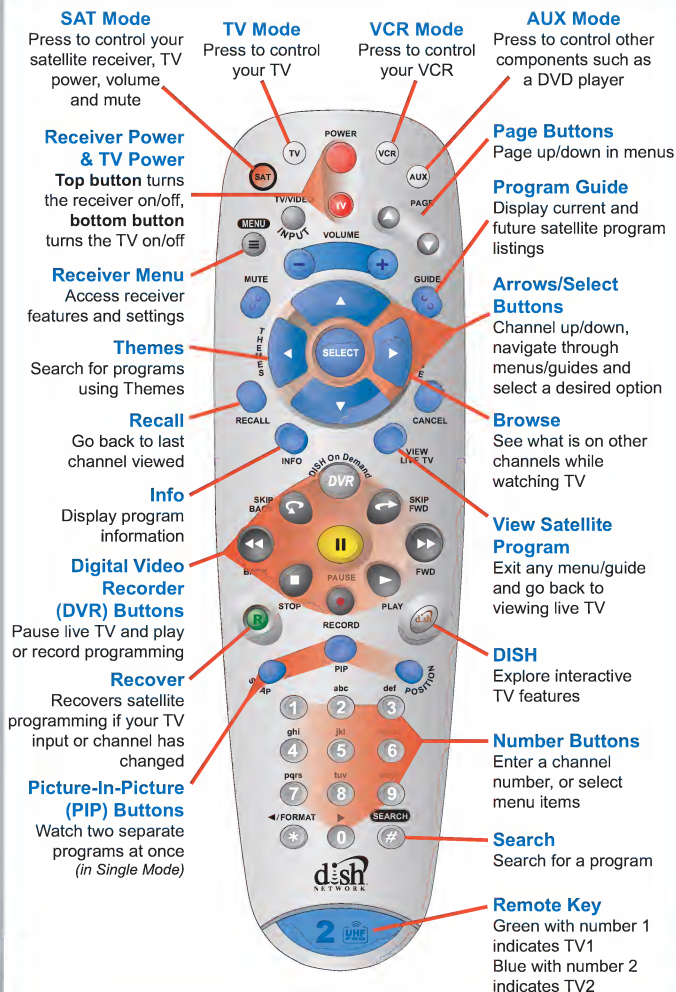

### Device Codes:

TV: \_\_\_\_\_ VCR: \_\_\_\_\_ AUX: \_\_\_\_\_

My remote is programmed in Limited Mode (check box): ☐

**Tip:** Using the Limited Mode option helps prevent you from accidentally tuning to a TV or VCR channel (or Input) that does not display satellite TV programming.

## How to Watch TV on TV2 2

TV2 viewing locations are identified with a blue key on your remote and the blue TV2 logo on the TV screen



To watch satellite TV or if you lose video:

Set TV to \_\_\_\_\_  
(Channel/Input)

Set VCR to \_\_\_\_\_  
(Channel/Input)

VCR must be \_\_\_\_\_  
(On/Off)

## Watching Your Satellite Programs

To operate your satellite receiver you must be in SAT mode by pressing the SAT Mode button



Turns the Satellite Receiver On or Off

Turns the TV On or Off

## Easy Ways to Find a Program



## Digital Video Recorder

